

ZING LIGHTWEIGHT GEN 3

SERVICE MANUAL

Contents

Routing



Routing – brake and shift



Routing - e-system



Routing - lights


Headset

Headset

E-system




Drive unit cover

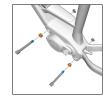

Drive unit fasteners



Battery docks

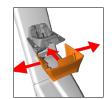

Install the lower battery dock

Frame



Front mudguard



Rear mudguard and rack



Rear derailleur hanger



Ring lock

Specs



Specifications

About this manual

Scope

This manual contains parts diagrams, specifications (such as grease and torque values), instructions, part numbers and helpful tips. It does not contain instructions for all components (such as brake callipers). Refer to the original manufacturer for more information.

Replacement parts

Trek recommends using only Trek OEM (original manufacturer) replacement parts.

Additional info

The Owner's Manual is available at Trekbikes.com/manuals.

Inspect the bike

Please inspect the bicycle carefully after removal from the box and all packaging:

- Inspect all surfaces of the bicycle for damage, paying special attention to the fork legs and the seat stays (both inside and outside surfaces).
- If packaging damage is located near the front of the bicycle, remove the fork from the frame and inspect the steerer tube for damage.

Legend



Cable (zip) tie

Nm

Torque value



Apply appropriate threadlocker



Apply Bontrager grease

Safety



WARNING

Tighten hardware properly

Always tighten hardware to the specified torque. Overtightening hardware could deform or break the hardware or components. Under-tightening or over-tightening hardware could cause hardware or components to become loose. Either situation could damage the bicycle and result in injury to the rider.




WARNING

Re-apply threadlocker


All reused-fasteners with a pre-applied threadlocker must be cleaned with isopropyl alcohol and have new threadlocker applied before re-assembly. If a threadlocker is not applied, the fasteners may loosen, which could damage the bicycle and result in injury to the rider.

Routing - brake and shift

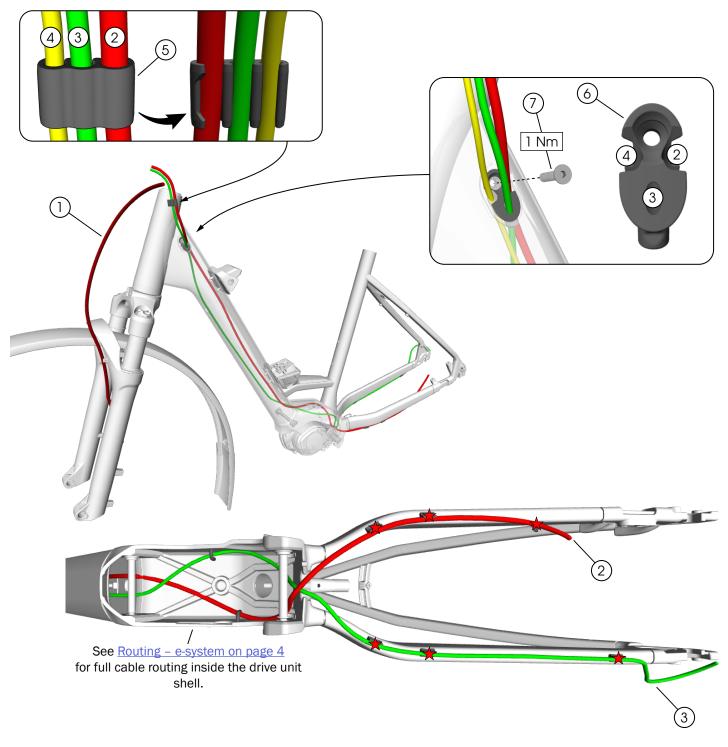


- (1) Front brake hose
- 2 Rear brake hose
- (3) Rear shift cable
- 4 Remote cable **EB12.120.005*

- (5) Cable clip W5319628
- (6) Cable guide W5257896
- 7 Fastener (M4 x 16 mm)

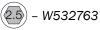

Routing - e-system

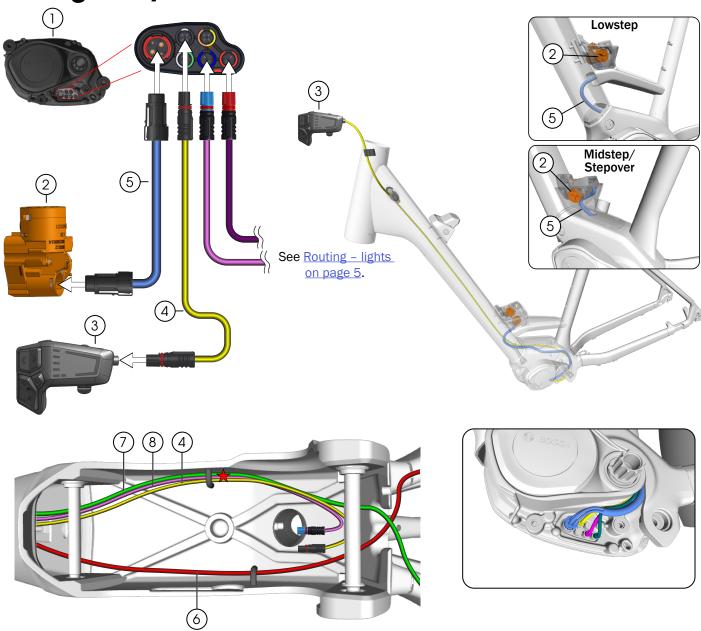


- The street of th
- 2) Battery adapter *EB12.100.014
- (3) Remote **EB13.100.00E-VE8*
- 4 Remote cable *EB12.120.005
- 5 Battery cable Lowstep (500) mm
 *EB12.120.00T

 Midstep/Stepover (400 mm)
 *EB12.120.00V
- 6 Rear brake hose

- (7) Rear shift cable
- 8 Front light wire *EB12.120.00H

*Bosch part number

Routing - lights

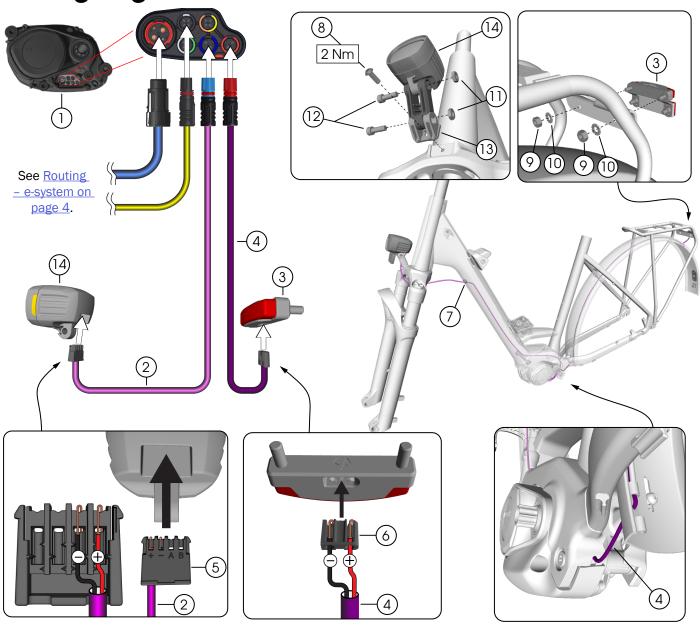


- (1) Drive unit *EB11.100.00E
- (2) Front light wire *EB12.120.00H
- (3) Rear light W5328257
- 4) Rear light wire *EB12.120.00F
- 5 Connector, front 5331539
- (6) Connector, rear 5307542
- (7) Grommet
- 8 Fastener (M6 x 12 mm)




- 9 Nuts (M6)
- (10) Serrated washers
- (11) Nuts
- (12) Fasteners
- (13) Mount
- (14) Front light

*Bosch part number

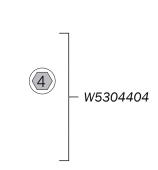


Headset

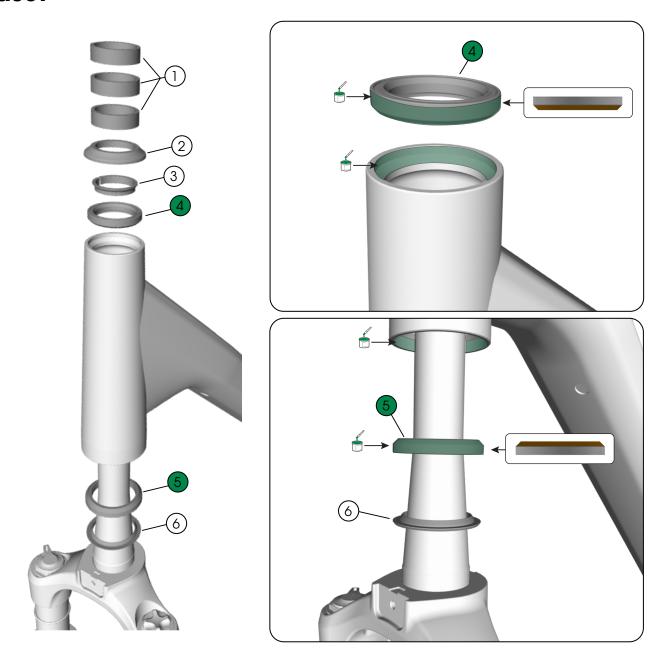

- 1 Spacers (10 mm) 5253929
- 2) Bearing top cover W5283853
- (3) Compression ring W532842
- Bearing, upper W531676
- 5 Bearing, lower W532843
- (6) Crown race (1.5"/38.1 mm) W532844


Drive unit cover

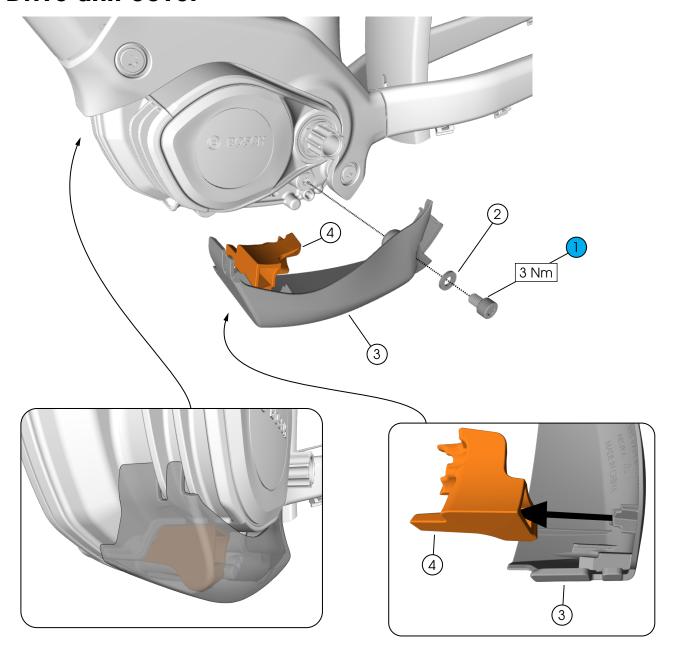


- Fastener (M6 x 12 mm) 5328800
- (2) Washer (M6) 5317317
- 3 Drive unit cover W5320172
- 4 Bosch Connect Module holder *EB13.900.018

^{*}Bosch part number

Drive unit fasteners

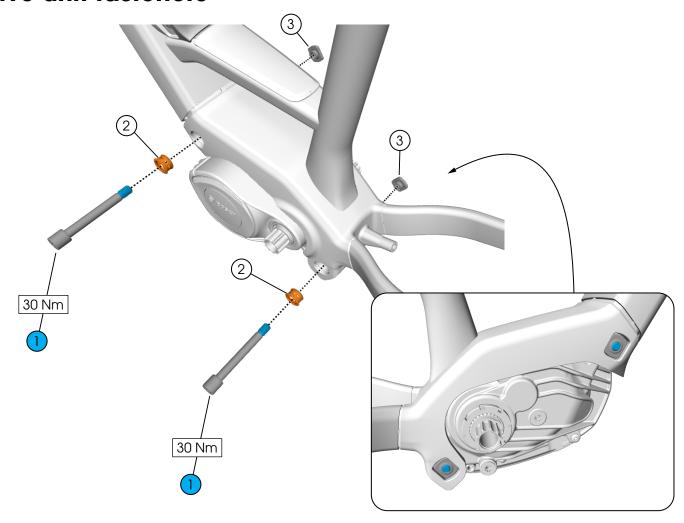

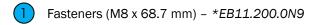




- (2) Sleeves *EB11.200.0GK
- (3) Nut-squares *EB11.200.03C

NOTE: Use a Bosch press-in/out tool (such as Cyclus P/N 2124349) to install the sleeves.




Remove the drive unit


- 1. Unplug the cables to the drive unit.
- 2. With your hand under the drive unit to support it, remove the fasteners.
- 3. Slowly lower the drive unit.

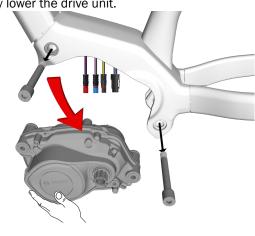



^{*}Bosch part number

Battery docks

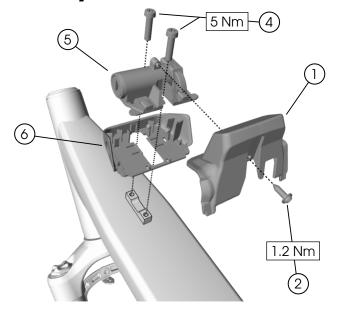

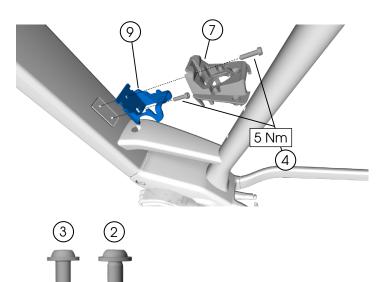

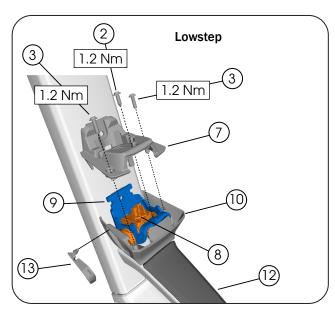

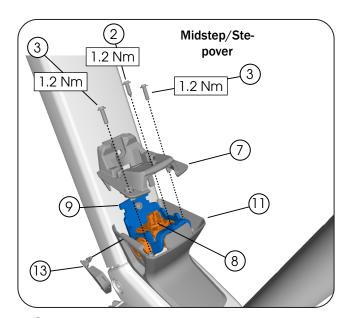


- 1 Lock housing *EB12.200.01D
- 2 Fasteners (M3.5 x 12 mm) 15 *1270.016.418
- (3) Fasteners (M3.5 x 12 mm) (115) *1270.016.417
- 4 Fasteners (M5 x 20 mm) T25 *EB12.200.01B
- (5) Lock W5284889
- (6) Cover W5285712
- 7 Mounting plate *EB12.200.0AR


- 8 Battery adapter *EB12.100.014
- (9) Fixing plate *EB12.200.03J
- (10) Shroud (Lowstep) W5320169
- 11) Shroud (Midstep/Stepover) W5320170
- (12) Guard (Lowstep) W5320171
- (13) Connector cover *EB12.200.0C7

^{*}Bosch part number

Install the lower battery dock

1. Attach the fixing plate and mounting plate to the frame.

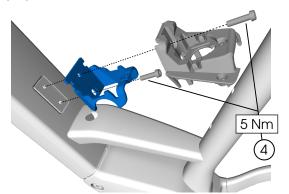

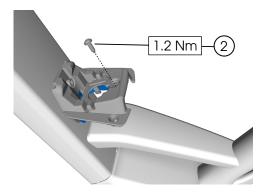


2. Insert the battery adapter and connect the battery cable.




3. Insert the connector cover into the shroud.




4. Install the shroud – pulling out the sides as you snap it into place.

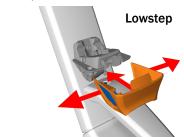


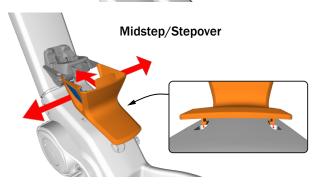



5. Install the other two fasteners.

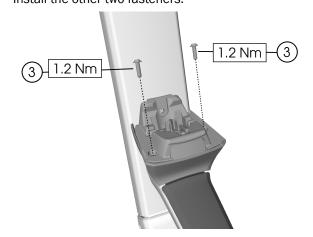

Front mudguard

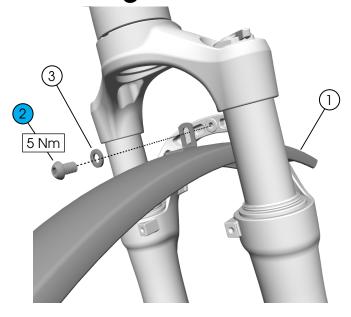

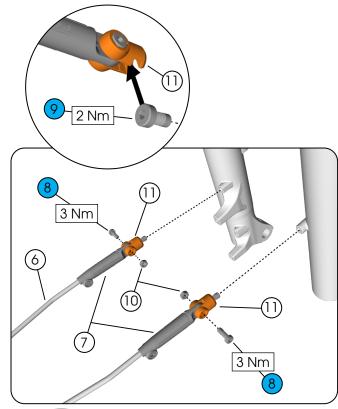

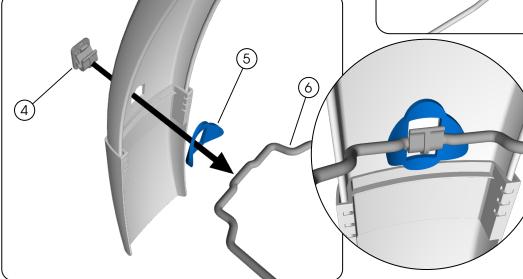

- Front mudguard (700 x 65 mm) W5321838
- Fastener (M6 x 10 mm)




- Split washer (M6) 5317315
- Stay clip



- (5) Damping rubber
- Mudguard stay (275 mm) W5321840

- Stay mounts 5258260
- Fasteners (M4 x 12 mm)

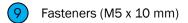


- Nuts (M4) 5328804
- Stay adapters W5326167







Rear mudguard and rack

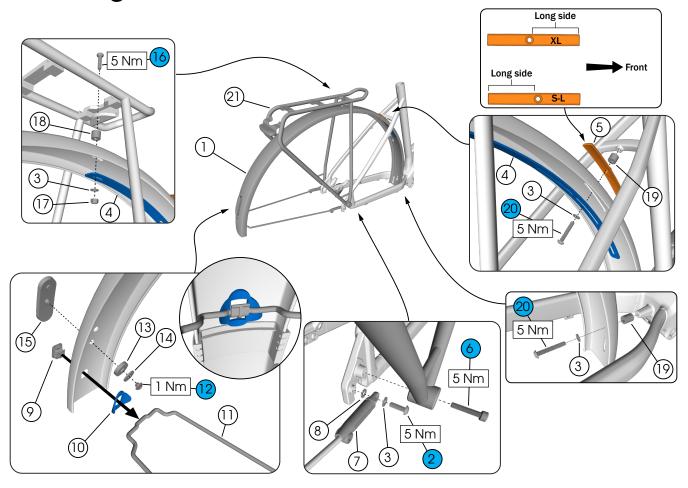


- (1) Rear mudguard (700 x 65 mm) W5321843
- 2 Fasteners (M5 x 16 mm)
- (3) 5328801
- (3) Washers (M5) W521137
- (4) Mudguard strut W600320
- 5) Slot cover (65 mm) W1049294
- 6 Fasteners (M5 x 25 mm)
- 4 5,257,031

5258253


- (7) Stay mounts 5258260
- 8 Serrated washers
- 9 Stay clip
- 10 Damping rubber
- (11) Mudguard stay (335 mm) *W*5321844

- Fastener (M3 x 5 mm)
- (13) Spacer
- (14) Washer (M5)
- (15) Reflector
- Fastener (M5 x 25 mm)
- (17) Nylock-nut (M5) 5317577
- (18) Spacer (15 mm)
- (19) Spacer (10 mm)
- Fastener (M5 x 30 mm)
- (21) Rack W5284844

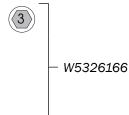






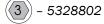


Rear derailleur hanger

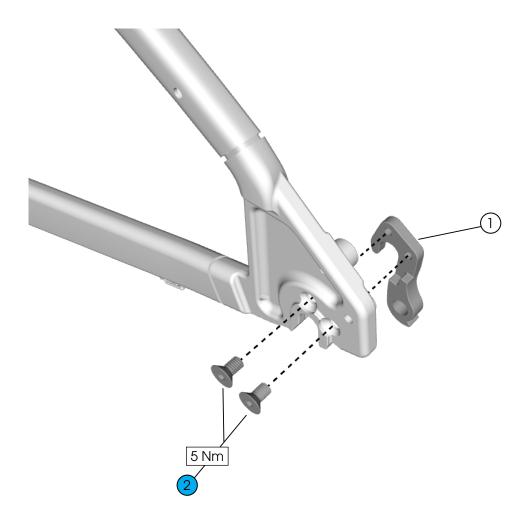

- (1) Rear derailleur hanger W322175
- 2 Fasteners (M5 x 9 mm) 3 W300580

Ring lock

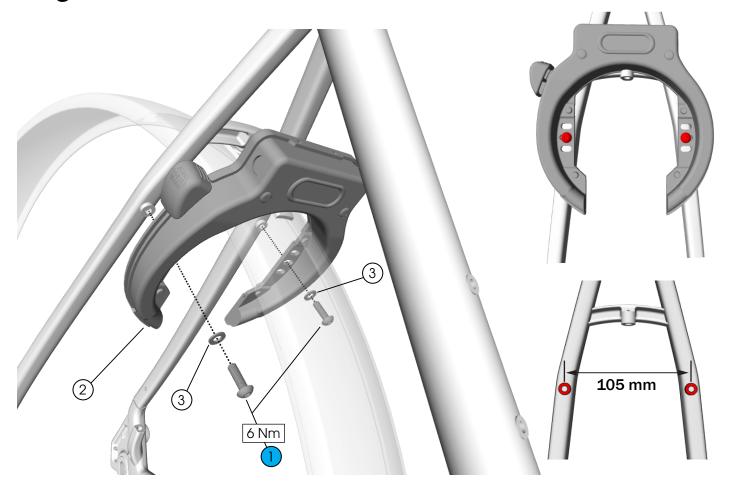

- Fasteners (M5 x 16 mm)
- 3 5328801

- 2 Ring lock
- (3) Washers (M5) 5317316

Specifications

Frame

Hub OLD	Front	100 mm
	Rear	135 mm
Fork steerer tube OD	Upper	28.6 mm
	Lower	38.1 mm
Brake rotor diameter min/max	Front	160/180 mm
	Rear	160/180 mm
Tyre width max 650b		*2.6"/66 mm
Dropper post compatible		No

^{*}as measured when the tyre is seated on the rim

Chain line/chain ring

Chainline	Max chain ring teeth (T)		
	Small	Large	Single (1x)
52 mm	_	_	40T

